

Check front brake and hydraulic clutch reservoir cover screw torque	X 2-32 2.13 & 2-30 2.12 both 12-15 in- lbs		X		X		X		X		X	1, 2, 7 phillips
Check hand control fastener switch housing screw torque	X 9-95 9.39 35-45 in- lbs		X		X		X		X		X	1, 2, 7 T-25
Check clutch lever handlebar clamp screw torque	X 9-95 9.39 60-80 in- lbs		X		X		X		X		X	1, 2, 7 T-27
Check master cylinder handlebar clamp screw torque	X 9-95 9.39 60-80 in- lbs		X		X		X		X		X	1, 2, 7 T-27
Inspect, lubricate and adjust steering head bearings						X					X	2, 8
Inspect windshield bushings (if equipped)			X		X		X		X		X	2

Inspect air cleaner, service as required	2-17 2.6 40-60 in-lbs	X	X	X	X	X	X	X	X	X	X	4 T-27 & 5/16 allen Blu loctite
Replace engine oil and filter	X 2-15 & 16 2.8 14-21' lbs	X	X	X	X	X	X	X	X	X	X	1, 4 5/8"
Check engine coolant freeze point, inspect for leaks	X 2-19 2.8	X	X	X	X	X	X	X	X	X	X	Test strips
Coolant	Replace coolant every 48,000 km(30000 mi)											2
Clean radiators or oil cooler	X 2-19 & 20 2.8	X	X	X	X	X	X	X	X	X	X	
Replace primary chaincase lubricant 30 ounces	X 2-26 2.10 Plug 14-21 ft lbs Cover 84-108 in-lbs		X		X		X		X		X	4 5/8 in T-27

Inspect and lubricate jiffy stand	X 3-159 3.52 15-20 ft-lbs	X	X	X	X	X	X	X	X	X	X	2, 4 ½"
Check, adjust and lubricate (with HARLEY LUBE) brake and clutch controls	X	X	X	X	X	X	X	X	X	X	X	
Check tightness of rear wheel spokes (if equipped)	X	X			X			X			X	2, 3, 4
Check rear tire pressure, inspect tread	X 2-23 & 24 2.9 40 lbs	X	X	X	X	X	X	X	X	X	X	1
Inspect and adjust drive belt and sprockets	X 2-37 2.15	X	X	X	X	X	X	X	X	X	X	2 Tension guage
Check rear axle nut torque	X 2-39 2.15 95-105 ft-lbs		X		X		X		X		X	1, 2, 7 HD-47925 Tourque adapter

<p>NOTES:</p>	<ol style="list-style-type: none"> 1. Perform annually or at specified intervals, whichever comes first. 2. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 3. Perform spoke tension check at 1,600 km(1000 mi), 8,000 km(5000 mi), 32,000 km(20000 mi) services and every 24,000 km(15000 mi) interval thereafter. Not all vehicles are equipped with spoke wheels. Consult appropriate topic in service manual. 4. Perform maintenance more frequently in severe riding conditions such as extreme temperatures, dusty environments, mountainous or rough roads, long storage conditions, short runs, heavy stop/go traffic or poor fuel quality. 5. Brake fluid level will drop as brake pads wear. 6. Clutch fluid level will rise as clutch wears. 7. For torque instructions, see Shop Practices in the service manual. 8. Disassemble, lubricate, inspect and adjust every 40,000 km(25000 mi). 9. Disassemble, inspect, rebuild forks and replace fork oil every 80,000 km(50000 mi).
----------------------	--

Table 1. Regular Service Intervals: 2017 Harley-Davidson Touring Models