



Wiring Instructions 99-9600

Connections to be made

the 23-pin harness

the aftermarket radio:

Connect the **Black** wire to the ground wire.

Connect the **Yellow** wire to the battery wire.

Connect the **Red** wire to the accessory wire.

Connect the **White** wire to the left front positive speaker output.

Connect the **White/Black** wire to the left front negative speaker output.

Connect the **Gray** wire to the right front positive speaker output.

Connect the **Gray/Black** wire to the right front negative speaker output.

the vehicle:

If the ASWC-1 (sold separately) is to be used, connect the **Pink/White** wire to the **Pink/White** wire from the vehicle. This wire is located near the left side speaker in a harness, and goes to the left side handlebar

controls (the clutch side). The **Pink/White** wire from the vehicle needs to be cut, and the **Pink/White** wire from the 23-pin harness connected towards the left side handlebar controls (the clutch side). (Figure A)

From the 12-pin harness to the aftermarket radio:

- The 12-pin harness is to be used in conjunction with the optional ASWC-1 (not included) to retain steering wheel controls. If the ASWC-1 is not being used, disregard this harness. If it will be used, please refer to the ASWC-1 instructions for radio connections and programming.

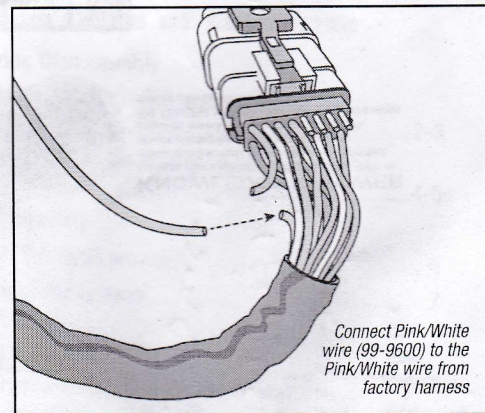


Figure A