

Biketronics Inc.

INSTALLATION GUIDE

7.1 Speakers

FITMENT: 2014 FLH

Kit Contents

- 2 - 7.1 speakers
- 2 - Speaker mounts
- 2 - 13/16th standoffs with washers
- 8 - #6-32 x 3/8" Phillips pan-head machine screw
- 6 - 5/16-18 nylon insert flange nut
- 2 - 1/4-20 x 5/8 torx socket button-head screw

Specifications

- 92.6 dB/SPL
- 49Hz - 22kHz
- 120 Watts RMS / 240 Watts Peak
- 4 ohm rated

Step 1

Removing Stock Speakers

Remove outer fairing. Unplug cigar lighter and speaker connectors. Remove plastic speaker pods. (Marker A)

Before



After





Step 2

Reclaiming Speaker Harness

Unscrew speakers from plastic pods.
Disconnect speaker harness.




Remove speaker harness from plastic speaker pods.

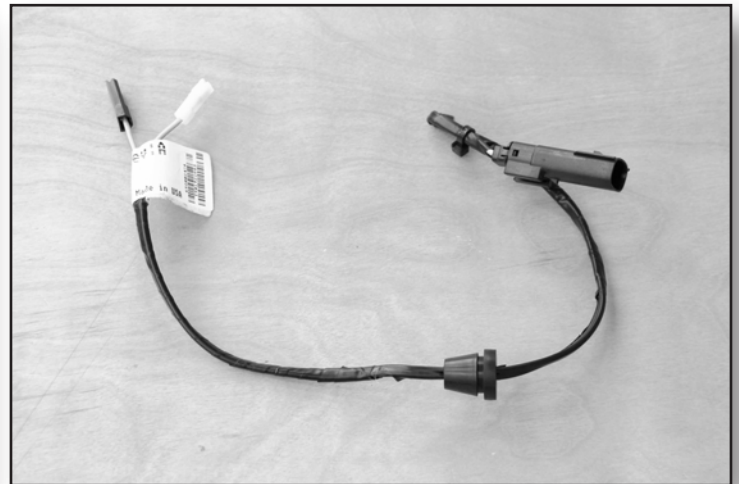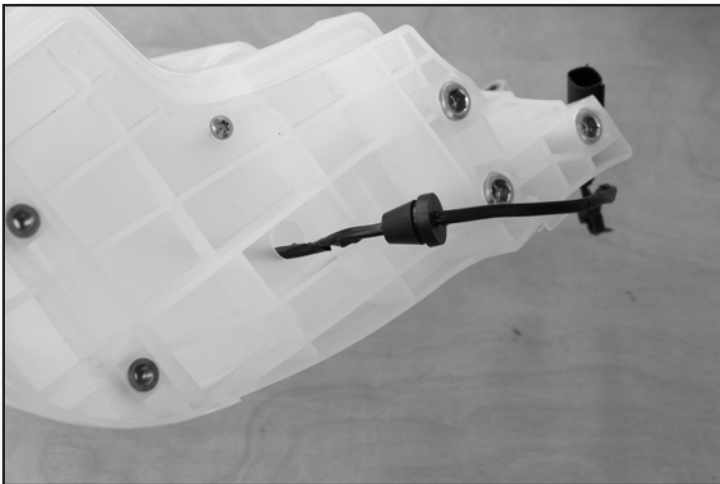

Step 3

Connecting the Speakers

Attach positive and negative terminal
leads to speaker as shown.

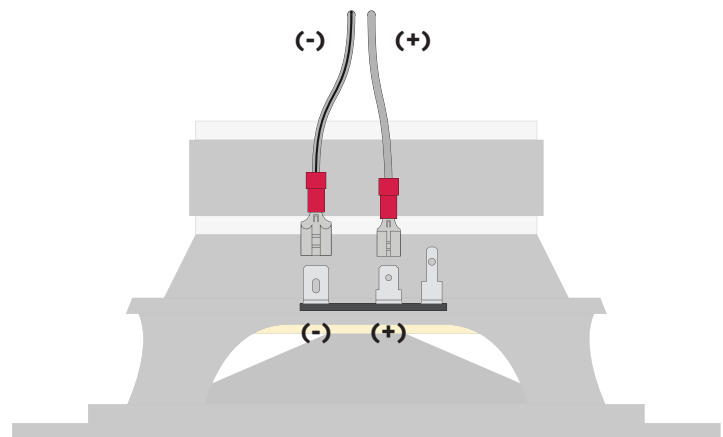

Step 4

Installing New Speakers

Install Biketronics speaker brackets using original hardware (Marker B) and supplied locknuts (Marker C).

Install Biketronics speakers using 6-32 x 3/8" screws.

Reconnect speaker harness from bike to speakers. (Marker D)



Step 5

Finishing Up

Test system, then re-install fairing using stock hardware except where standoffs exist.

Install standoffs into both lower outer fairing mounting points. (Marker E)

For standoffs, use supplied 1/4-20 x 5/8 screws.

